 


FOR OFFICIAL USE ONLY

**ELECTRONIC VOTING MACHINE  
FOR LOCAL BODY ELECTIONS  
MANUAL**



PREPARED AND PUBLISHED BY  
**ELECTRONICS CORPORATION OF INDIA LIMITED**  
HYDERABAD - 500 051

Copyright©

**ELECTRONICS CORPORATION OF INDIA LIMITED**

The contents of this manual should not be reproduced

either in part or in full without the consent of the

**ELECTRONICS CORPORATION OF INDIA LIMITED**

# CONTENTS

Para No.	Description	Page No.
<b>CHAPTER 1 - INTRODUCTION</b>		
1-5	Preliminary	1
6-7	Opening of Carrying Cases	2
8	Inspection	2
9-16	Ballot Unit	3
17-27	Control Unit	5
28	Beep Tones	11
<b>CHAPTER 2 - FUNCTIONS OF BUTTONS / SWITCHES / DMM</b>		
1-2	Ballot Unit	12
3-12	Control Unit	12
<b>CHAPTER 3 - COMMISSIONING OF EVM BY RETURNING OFFICER</b>		
1	Preliminary	16
2-9	Ballot Unit	16
10-15	Control Unit	20
<b>CHAPTER 4 - COMMISSIONING OF EVM BY PRESIDING OFFICER AT POLLING STATION ON DATE OF POLL</b>		
1	Preliminary	31
2	Ballot Unit	31
3-13	Control Unit	31
14	Procedure during poll	39
15-18	Procedure at the Close of Poll	40
<b>CHAPTER 5 - PROCEDURE AT THE COUNTING PLACE</b>		
1	Preliminary	41
2-12	Counting Procedure	41
A-C	Summary of Operations	44
D	Defects and Remedies	47
E	DOs and DONTs	49
F	Storage of EVMs	50

## **ABBREVIATIONS:**

BU	-	Ballot Unit
CRC	-	CLOSE, RESULT - I and CLEAR sequence
CU	-	Control Unit
DMM	-	Detachable Memory Module
ECIL	-	Electronics Corporation of India Limited
"Er"	-	Error
EVM	-	Electronic Voting Machine
LE	-	Link Error
PE	-	Press Error
SEC	-	State Election Commission